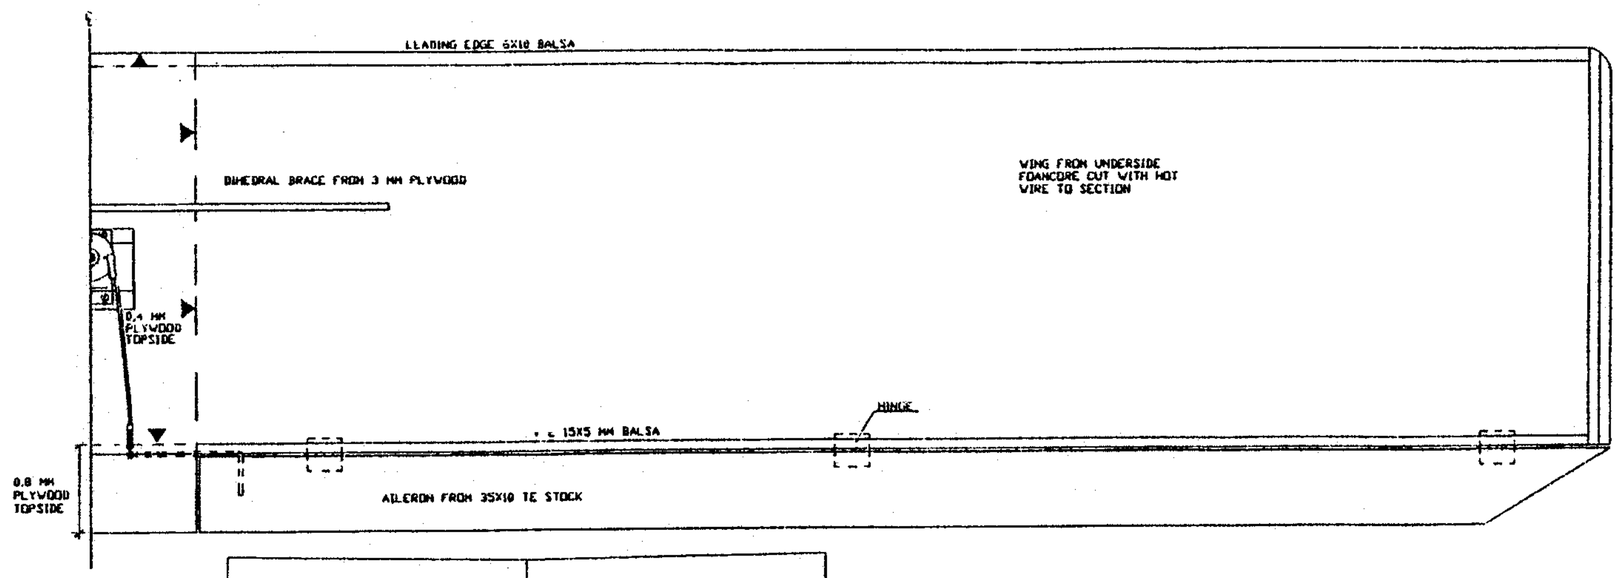

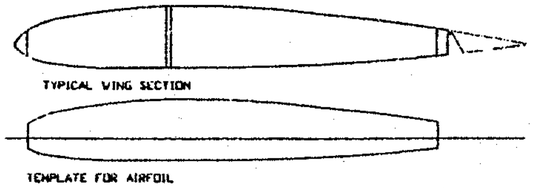

COVER FOAM WITH BROWN PAPER OR 1.5 MM BALSA SHEETS. REFER TO INSTRUCTIONS

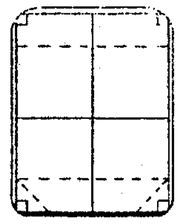

TYPICAL SECTION BETWEEN FORMERS F1 - F2

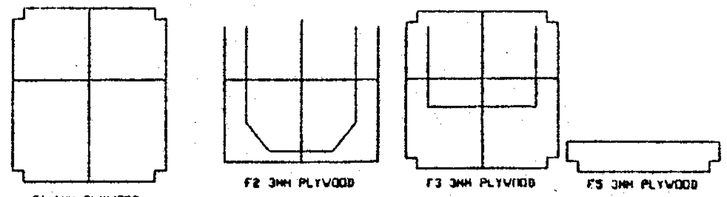



F6 5 MM PLYWOOD

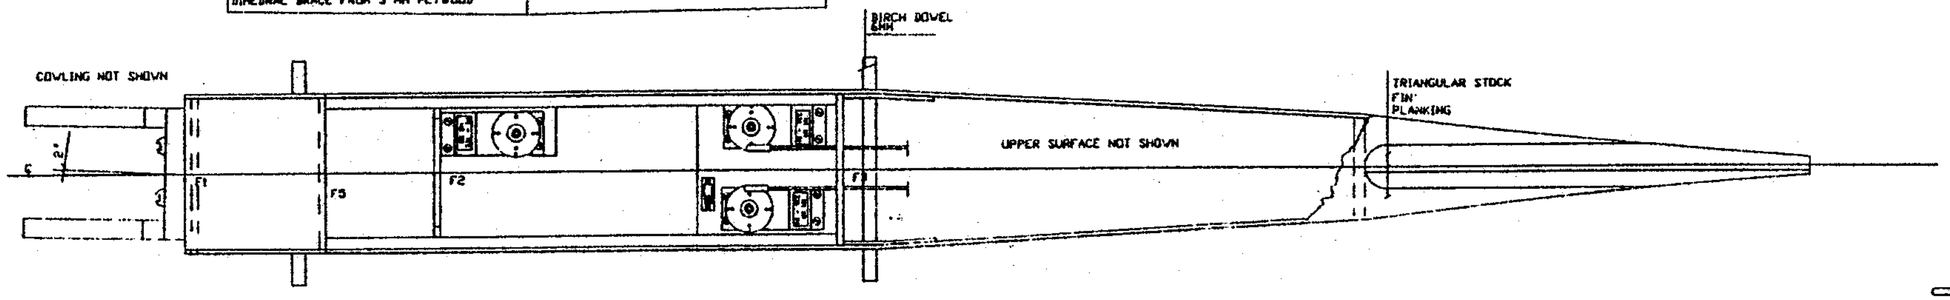

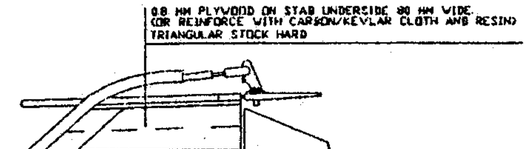

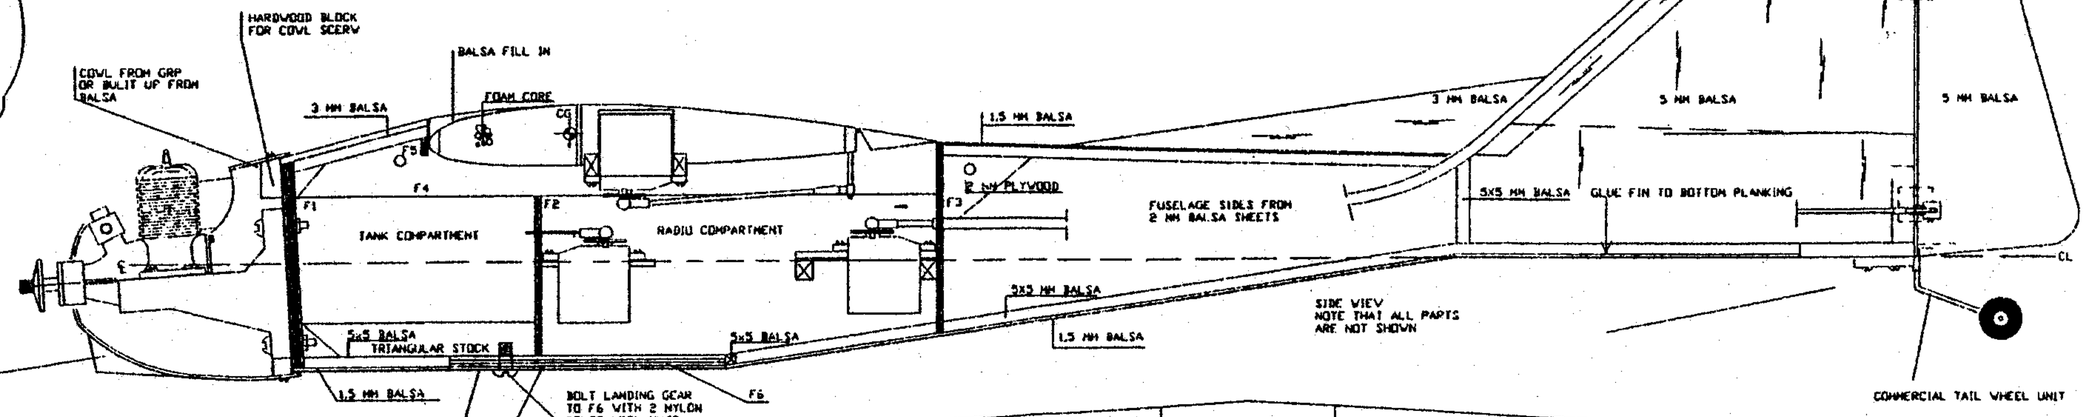

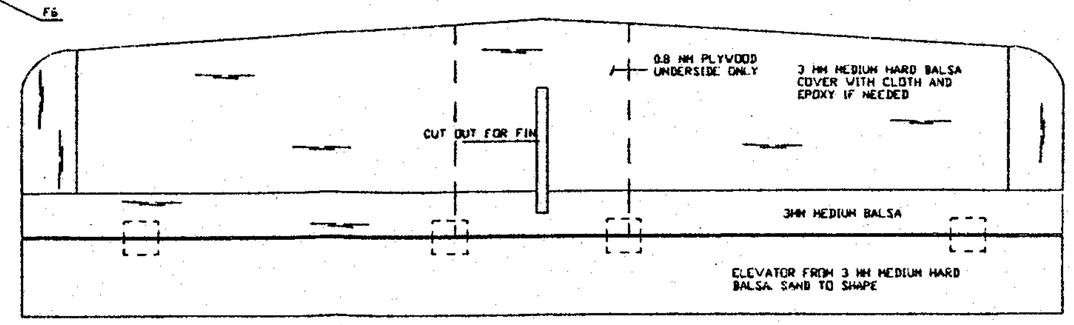

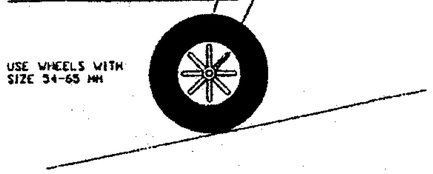

INSTRUCTIONS
DIHEDRAL 10MM ON EACH WINGPANEL
USE ENGINE THRUST LINES AS PER PLAN.
ADJUST AFTER FIRST FLIGHT IF NEEDED.
BIG FOURSTROKES COULD NEED MORE RIGHT HAND THRUST OFFSET.
START WITH CONTROL MOVEMENTS AS PER BUILDING INSTRUCTIONS.

MILLIMETER TO INCH CONVERSION TABLE			
MM	INCHES	MM	INCHES
0.4	1/64	5	3/16
0.8	1/32	6	1/4
1.5	1/16	10	3/8
2	3/32	25	1
3	1/8	35	1 3/8

USE SIZES IN INCHES ABOVE IF METRIC WOOD IS UNAVAILABLE.

Model Airplane News

The FENIX

Designed and Drawn by Bertil Klintbom

All Rights Reserved

Sheet 1 of 1

FSP 06991