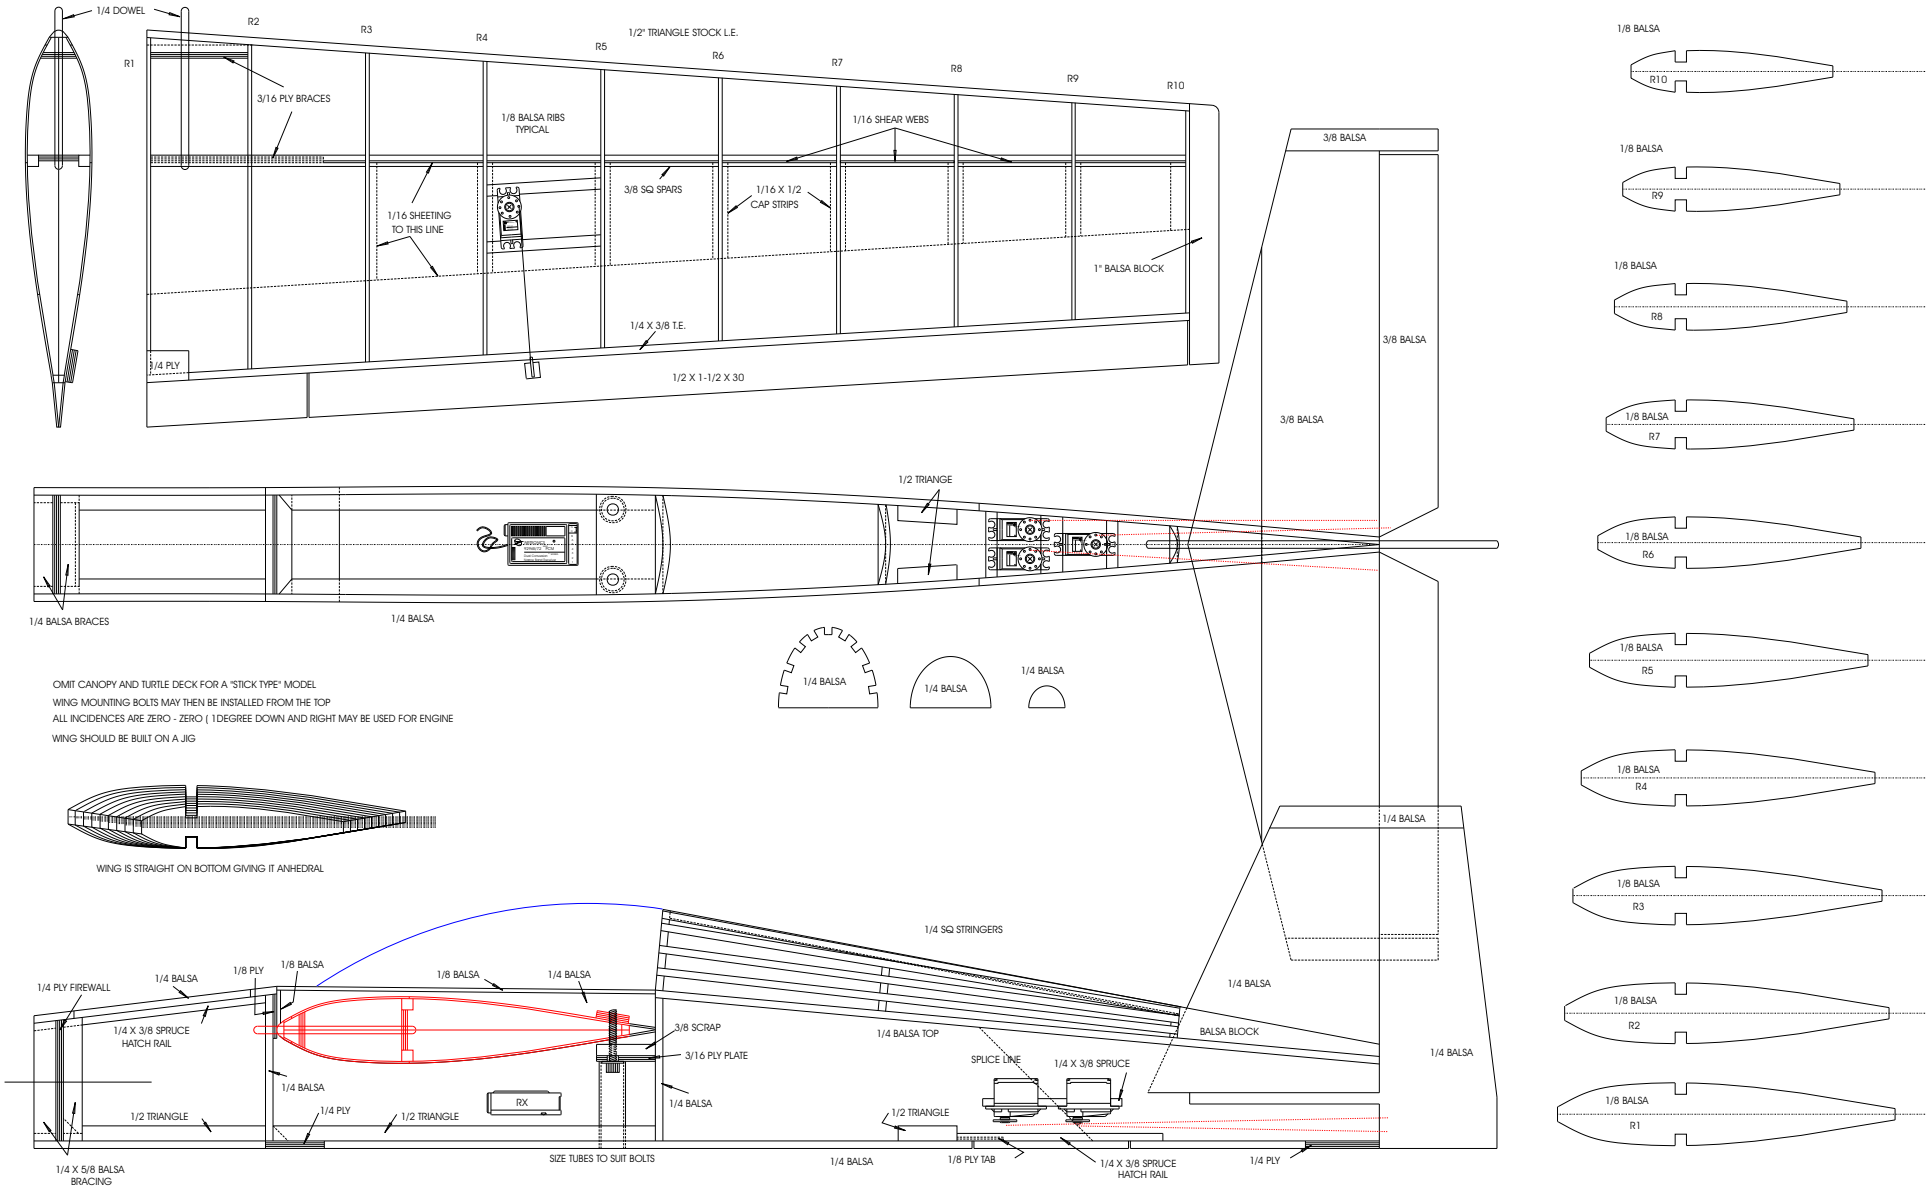
1/4 DOWEL
R1
R2
R3
R4
R5
R6
R7
R8
R9
R10
1/2" TRIANGLE STOCK L.E.
3/16 PLY BRACES
1/8 BALSA RIBS TYPICAL
1/16 SHEAR WEBS
3/8 SQ SPARS
1/16 X 1/2 CAP STRIPS
1/16 SHEETING TO THIS LINE
1" BALSA BLOCK
1/4 X 3/8 T.E.
3/4 PLY
1/2 X 1-1/2 X 30
3/8 BALSA
3/8 BALSA
3/8 BALSA
1/8 BALSA
R10
1/8 BALSA
R9
1/8 BALSA
R8
1/8 BALSA
R7
1/8 BALSA
R6
1/8 BALSA
R5
1/8 BALSA
R4
1/8 BALSA
R3
1/8 BALSA
R2
1/8 BALSA
R1
1/2 TRIANGE
1/4 BALSA BRACES
1/4 BALSA
1/4 BALSA
1/4 BALSA
1/4 BALSA
OMIT CANOPY AND TURTLE DECK FOR A "STICK TYPE" MODEL
WING MOUNTING BOLTS MAY THEN BE INSTALLED FROM THE TOP
ALL INCIDENCES ARE ZERO - ZERO (1DEGREE DOWN AND RIGHT MAY BE USED FOR ENGINE
WING SHOULD BE BUILT ON A JIG
WING IS STRAIGHT ON BOTTOM GIVING IT ANHEDRAL
1/4 SQ STRINGERS
1/4 BALSA
1/4 BALSA
1/4 PLY FIREWALL
1/4 BALSA
1/8 PLY
1/8 BALSA
1/8 BALSA
1/4 BALSA
1/4 X 3/8 SPRUCE HATCH RAIL
3/8 SCRAP
3/16 PLY PLATE
1/4 BALSA TOP
BALSA BLOCK
SPLICE LINE
1/4 X 3/8 SPRUCE
1/4 BALSA
1/4 BALSA
1/2 TRIANGLE
1/4 PLY
1/2 TRIANGLE
RX
1/4 BALSA
1/2 TRIANGLE
1/4 X 5/8 BALSA BRACING
SIZE TUBES TO SUIT BOLTS
1/4 BALSA
1/8 PLY TAB
1/4 X 3/8 SPRUCE HATCH RAIL
1/4 PLY